 


Haier

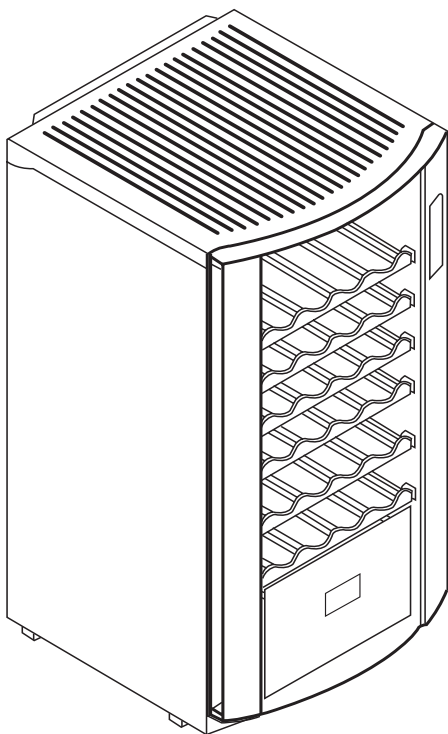

Wine Cellar

User Manual-

(Features and size may vary per model)

Model #

JC-110GD

JC-160GD

IMPORTANT SAFEGUARDS

When using this appliance, always exercise basic safety precautions, including the following:

1. ***Read all of the instructions before using this appliance.***
2. Use this appliance only for its intended purpose as described in this use and care guide.
3. This wine cellar must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
4. Never unplug your wine cellar by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
5. Unplug your wine cellar before cleaning or before making any repairs.
Note: *If for any reason this product requires service, we strongly recommend that a certified technician performs the service.*
6. Repair or replace immediately, all electric power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
7. This wine cellar should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
8. If your old wine cellar is not being used, we recommend that you remove the door and leave the shelves in place. This will reduce possibility of danger to children.
9. Do not operate your wine cellar in the presence of explosive fumes.
10. Do not store foods in wine cellar as interior temperature may not be cool enough to prevent spoilage or may cause bacteria growth.
11. The appliance must be positioned so that the plug is accessible.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
14. Do not damage the refrigerant circuit.
15. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

SAVE THESE INSTRUCTIONS

DANGER

Risk of child entrapment. Before you throw away your old wine cellar, take off the doors. Leave the shelves in place so that children may not easily climb inside.

Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your wine cellar.

Remember to record the model and serial number. They are on a label in back of the wine cellar.

Model number

Serial number


Date of purchase

Staple your receipt to your manual. **You will need it to obtain warranty service.**

Table Of Contents

	PAGE
Important Safeguards	1
Parts And Features	4
Installing Your Wine Cellar	5
Unpacking Your Wine Cellar	5
Leveling Your Wine Cellar	5
Proper Air Circulation	5
Electrical Requirements.....	6
Installation Limitations	6
Use of Extension Cords	6
Wine Cellar Features And Use	7
Initial Set Up	7
Temperature Adjustment.....	7
Interior Fan	8
Humidity Display and Control	8
Shelving.....	9
Deodorizer	9
Interior Light	9
Normal Operating Sounds	9
Proper Wine Cellar Care and Cleaning	10
Cleaning and Maintenance	10
Changing Light Bulb	10
Power Interruptions	11
Vacation and Moving Care	11
Troubleshooting	12

 Parts And Features

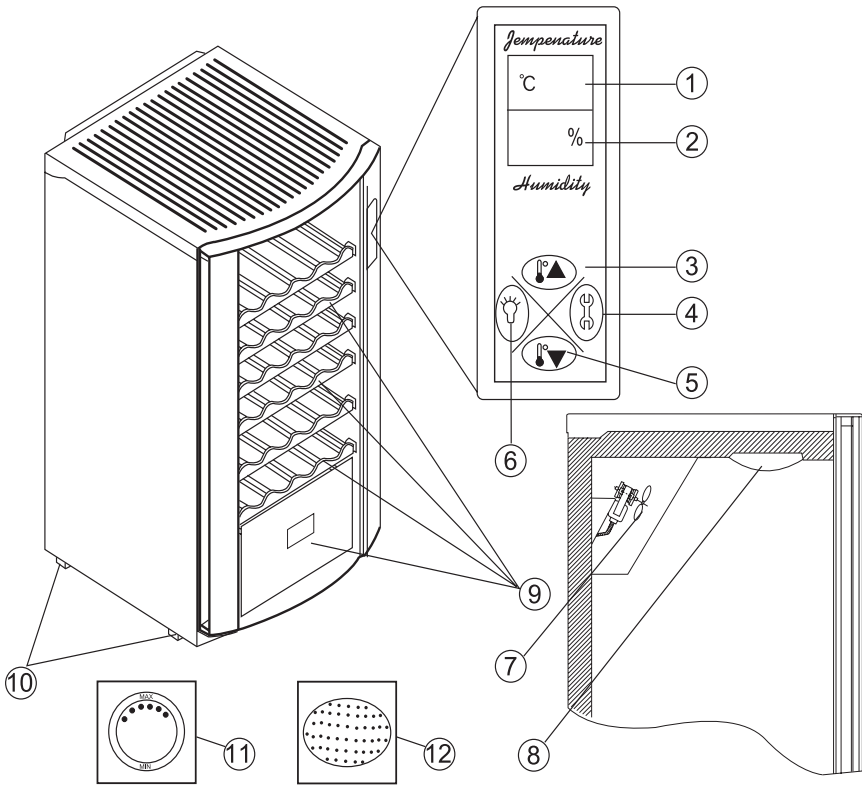

(Features may vary per model)

- | | |
|----------------------------|--|
| 1. LED Temperature Display | 7. Interior Fan |
| 2. Humidity Display | 8. Lamp |
| 3. Temperature Adjust Up | 9. Interior Shelves(storage quantity and style varies per model) |
| 4. Temperature Set Button | 10. Adjustable Leveling Legs |
| 5. Temperature Adjust Down | 11. Humidity Control |
| 6. Interior Light Button | 12. Deodorizer |

Installing Your Wine Cellar

Unpacking Your Wine Cellar

1. Remove all packaging material. This includes the foam base and all adhesive tape holding the wine cellar accessories inside and outside.
2. Inspect and remove any remains of packing, tape or printed materials before powering on the wine cellar.

Leveling Your Wine Cellar

- Your wine cellar has four leveling legs which are located in the front and rear corners of your wine cellar. After properly placing your wine cellar in its final position, you can level your wine cellar.
- Leveling legs can be adjusted by turning them clockwise to raise your wine cellar or by turning them counterclockwise to lower your wine cellar. The wine cellar door will close easier when the leveling legs are extended.

Proper Air Circulation

- To assure your wine cellar works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the wine cellar:
Sides.....2" (50mm)
Top.....2" (50mm)
Back.....2" (50mm)
- Do not over fill your wine cellar for proper wine cooling.

Note: If your wine cellar has been tilted for any reason, wait 24 hours before plugging it in.

Electrical Requirement

- Make sure there is a suitable power Outlet (220~240 volts, 15 amps outlet) with proper grounding to power the wine cellar
- Avoid the use of three plug adapters or cutting off the third grounding in order to accommodate a two plug outlet. This is a dangerous practice since it provides no effective grounding for the wine cellar and may result in shock hazard.

Install Limitations

- Do not install your wine cellar in any location not properly insulated or heated e.g. garage etc.
- Select a suitable location for the wine cellar on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected with the leveling legs located on the front and rear bottom corners of the wine cellar.
- Your wine cellar is designed for free-standing installation only. It is not designed for built-in application.

Use of Extension Cord

- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord which is approved according to safety standard DIN VDE 0620. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.

Wine Cellar Features And Use

Initial Setup

Once you have plugged the unit into an electrical outlet, let the unit run for at least 30 minutes to acclimatize itself before making any adjustments. During this time the default temperature is 13°C.

Temperature Adjustments: See fig. # 1

- The wine cellar can be set to any temperature between 4°C and 18°C to accommodate your wine storage requirements. Press "⏸" button for 3 seconds, the temperature display will coruscate, Then press the "⬆▲" button one time, Temperature will increase 1°C until 18°C, At the same time the "⬆▲" button one time, Temperature will decrease 1°C, until 4°C. When you set the demand temperature, Please press the "⏸" button to confirm, The lock in the LED display will turn red and lock.




CAUTION: After temperature setting if you do not press the "⏸" button, 15 second later, the setting program will lock.

- There is often a 3°C variance between the top and bottom shelves of the wine cooler. Therefore, if you have set the wine cellar for 10°C and have a mix of red and white wines, you may want to put the white wine on the bottom shelf where the temperature will be 7°C, and place the red wine on the top shelf where the temperature will be 13°C.

Note: The temperature displayed is the current internal temperature.

 fig. # 1

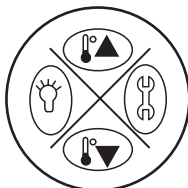

Interior Fan While open the glass door, Interior Fan will stop; Close the glass door. Interior Fan will start working.

Humidity Display and Control See fig. # 2

- The LED screen displays the percentage of humidity in the wine cellar.
- The humidity control located at the rear of the unit helps in air circulation and to adjust humidity level in the wine cellar.
- To have all the air holes open simply adjust the humidity control so as all the holes are on the top. (see fig. #2)

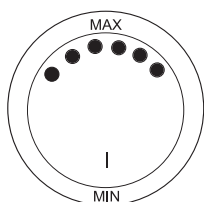 


fig. # 2

 
Note: Unit internal humidity is relevant to outside temperature.

Shelving (Type and number of shelves will vary per model)

- The shelves are designed for appearance and easy cleaning. Larger bottles or Magnums can be more easily accommodated at the cross shelves at the bottom of the cellar.
- Your wine cellar comes with wine shelves which glide out. This number depends on the model purchased.
- To remove the glide out shelves, pull out the shelf completely, carefully lift the shelf from the securing hooks on the tracks and remove. To replace the shelf make sure that the securing hooks on each track are in between the shelf stoppers on the shelf.

Deodorizer See fig. #3

- The deodorizer holes help to remove stale unwanted odor.

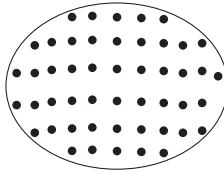

Deodorizer

- The deodorizer air holes are located on the rear of the unit.

Interior Light See fig. #1

- To complement the look of your wine collection, a soft light has been built into the wine cellar. Simply push the "💡" button and the light comes on, push again for off. For maximum energy efficiency, leave light off when not viewing your collection.

Normal Operating Sounds You May Hear

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.

Proper Wine Cellar Care and Cleaning

Cleaning and Maintenance

Warning: To avoid electric shock always unplug your wine cellar before cleaning. Ignoring this warning may result in death or injury.

Caution: Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

General:

 
- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your wine cooler.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your wine cellar.

Door Gaskets:

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

Changing the Light Bulb See fig. #3

- Remove the top shelf.
- Using a philliphead screwdriver unscrew the 2 screws that hold the bulb cover.
- Unscrew the bulb from the socket.
- Screw on a new bulb not exceeding 15 watts.
- Replace the light bulb cover to its original position using the 2 screws.
- Place the top shelf back into its original position.

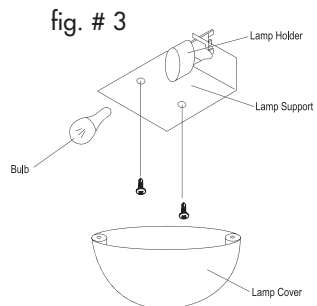

Power Interruptions


- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, replug power cord to AC outlet.

Vacation and Moving Care

- For long vacations or absences, unplug the wine cellar and clean the wine cellar and door gaskets according to "General cleaning" section. Leave doors open, so air can circulate inside.
- When moving always move the wine cellar vertically. Do not move with the unit lying down, as possible damage to the sealed system could occur.

Note: After moving, wait for 24 hours before plugging in the wine cellar.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

TroubleShooting

Wine Cellar Does Not Operate:

- Check if wine cellar is plugged in.
- Check if there is power in the ac outlet, by checking the circuit breaker.

Wine appears too warm:

- Frequent door openings.
- Allow time for recently added wine to reach desired temperature.
- Check gaskets for proper seal.
- Clean condenser coils.
- Adjust temperature control to colder setting.

Wine temperature is too cold:

- If temperature control setting is too cold, adjust to a warmer setting.

Wine cellar runs too frequently:

- This may be normal to maintain constant temperature during high temperature and humid days.
- Doors may have been opened frequently or for an extended period of time.
- Clean condenser coils.
- Check gasket for proper seal.
- Check to see if doors are completely closed.

Moisture build up on interior or exterior of the wine cellar:

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

Wine cellar door does not shut properly:

- Level the wine cellar.
- Check for blockages e.g. wine bottles, shelves.



0070504726